

Gradiente	1369, 1804, 0170, 1029	Magnavox	3623, 2372, 0054, 1454, 1944, 1963, 0706, 1506, 0171, 1365, 1755, 1887, 2676	Panasonic	1636, 1480, 1291, 3834, 0054, 0060, 0145, 0150, 0154, 0156, 0178	SEG	3434	Vestel	2676, 3175
Grundig	1523, 0672, 1667 0180				Seiki	3593, 2964, 3559, 3560, 3382, 0178		Victor	0145, 0150, 0156, 0170
Grunpy	1749, 2309, 2876, 4120, 3382, 1753, 2293, 0768, 4398, 1034, 3620, 3663, 2690, 0876, 3204				Semivox	0180, 0463		Videoseven	1217
Haier	1749, 2309, 2876, 4120, 3382, 1753, 2293, 0768, 4398, 1034, 3620, 3663, 2690, 0876, 3204				Semp	1743, 0156, 3793		Videokron	1398, 0054
					Semp Toshiba	1743, 3793, 0156		Vidtech	0178
					Sens	1749		Viewpia	0876
					Serie Dorada	0180, 3485, 3814, 4221, 0156, 0178		Viewsonic	2014, 3706, 2745, 2087, 1542, 1755, 1330, 2049, 3810, 0885, 1742, 1745, 1365
					Sharp	0451, 1029, 2414, 1362, 1661, 4178, 4024, 3639, 3697, 0054, 0171, 1963			
					Signature	0092, 1394, 0145, 0463, 0391, 1911			
					Signature 2000	1887, 2800, 4222, 3614, 2372, 1506, 1454, 2708, 3623, 0150, 0178			
					Silo	3899, 4182			
					Silo Digital	3899, 4182			
					Skrayon	4057			
					SkyVue	2360			
					Sonyview	4179			
					Sony	0810, 4448, 3691, 1685			
					Soundseign	0178, 0180			
					Soyo	1746, 1520			
					Space Tek	1696			
					Spectroniq	1523, 1687			
					Speler	4105, 4041			
					Squareview	0171			
					SSS	0180			
					Starlite	0180			
					STI	3793			
					SunBriteTV	2337, 1610			
					Supercan	1944, 0171			
					Supersonic	2104, 3877, 1753, 1667			
					Supra	3332, 3047, 4057, 3717, 3332, 3636, 3895, 3953, 4495, 4057, 3939, 2746			
					Suzuki	0587, 0748, 0865, 0768, 0872, 0870, 0871, 1963			
					Suzuki Time	0171, 0054, 1864, 1963, 1944, 1886, 1394, 3134, 0587			
					SYA	0171, 1944, 1963, 1394, 0180			
					Sylvania	1610, 1144			
					Symphonic	4554			
					Tec	1540			
					Tecnic	0178			
					Teknika	0642			
					Tekno	2434, 4398, 3047, 3426, 2429, 3183, 3847, 4177, 2414, 4176, 0898, 2403, 2958, 4178			
					Tecmaster	2241			
					Teco	0017			
					Teknika	1667, 2676			
					TekniSat	3175, 0556			
					Tecwood	2676			
					Tecwood	3331, 4612			
					Teco	1523			
					Teknika	0054, 0180, 0092, 0080, 1590, 1745			
					Teknika	0138, 0017			
					Toshiba	2414, 2676, 4025, 4302, 3047			
					Telefunken	4302, 3047			
					Thomson	0775, 2262, 2527			
					TMK	0178			
					TNGI	0017			
					Tononac	1321, 3485, 4221, 4444, 4554			
					Tophouse	0463, 1892, 1911, 1670, 4053, 1675, 0171, 3559, 4538			
					Tosaki	0872			
					Toshiba	1524, 3134, 1743, 4024, 1480, 3697, 0054, 0088, 1667, 0463, 1911, 3485, 1892, 2031			
					TVS	1523, 1687			
					Ultra	0178, 0180			
					United	3434, 1523			
					Upstar	4182			
					V7 Videoseven	1217			

	Pace	1376, 1877, 3454, 1883, 1998, 4537, 4981	Ortek	3122
030, 3336,			Panasonic	3760
	Pergamino	3524, 3121, 5357	Pivos	4339
076, 1998	Pioneer	1877, 0877	RCA	3177
	Pirelli	2944	Roku	3335
	Playcom	3037, 3459, 3527, 5025, 5026, 5027, 5028, 3872, 5024, 5034	Sony	2713, 1272
076			TDA	4684
076, 1877			TelevisiUn	
	Prime	3033	Digital Abierta	4684
021, 1954,	Sagem	3288	Tibo	4339
36, 0877,	Sagemcom	3288	Toshiba	1272
	Samsung	1877	Uelbo	3350
	Scientific		Vensmile	4899
076, 4375,	Atlanta	0877, 1877, 3028	Viewsonic	1272
	Skyworth	4963	Western Digital	2558
077, 1877	Supercanal	1376, 0476, 4537	Xbox	4000, 2049
	TCC	2042, 4409, 4408	Xiaomi	3982
076, 4375,	Technicolor	2268, 4961, 4981, 3454	Xtreamer	2723, 4727
076	Technotrend	3035		
076	TeleCable	0476, 1376	Apple	1115
077, 3028,	Telecentro	0476, 1376, 4514	Aura	4293
006, 4374,	Telefonica	3288, 2944, 3028, 3033, 3034, 3035, 3036, 3037, 3452	Bose	4037, 3708
050, 3452			Boston	
061, 0476,	TeleRed	0476	Acoustics	3698
094, 5349,	Telexmex	1376, 5096	Denon	2815, 4028
063, 5096	Telsur	5059, 4604, 4605	Durabrand	1561
063, 4408,	Totalplay	4634, 4589, 4591	Haier	3516
	TRC	3527	Harman/Kardon	3756, 3511
021, 5357	TuVes	4409	Inkel	4090
	TV Cable	1376, 0476	Insignia	3951
	TVA Digital	1804	Integra	1789, 3993
	UNE	2506	JBL	3756, 3533
	US Electronics	0877	JVC	3049
054	Vivo	2944, 3288	Lenox	1561
	VTR	1376	LG	3272, 3996
	WNC	3118	Logitech	1408, 3556
	Xavi	4371	Magnavox	3282
	X-Trak	1376	NBX	3868
	ZyXEL	2944	Onkyo	3992, 1789
			Panasonic	3233, 3409
004, 4605			Philips	4105, 3778
036, 3121,			Pioneer	3956
			Poly Audio	3429
063, 4281,	A.C.Ryan	3722, 2709, 3350	Samsung	2760
083	ABS	1272	Sharp	3636, 3091
089	Alienware	1272	Sherwood	4090
	Amlogic	4899	Sonos	3919
025	Apple	2615	Sony	3700, 4311
081, 0476,	Aqua-rio	4305	Teac	4116
037	Armada	4899	Telefunken	3516
081, 0476,	BGH	3644	Toshiba	3627
037	Cetron	1272	VIZIO	2454
	Dell	1272	Yamaha	3823, 2116
	Diamond	3786, 2709		3325, 2021
009, 4458,	Dune	3230	ZVXO	3913
	Elewo	3047		
009, 4458,	Gateway	1272		
	G-Box Midnight	4440		
	Geniatech	4339		
	Gigabyte	3644		
	Hewlett Packard	1272	Denon	2706
	HP	1272	Harman/Kardon	0892, 3049
	iconBIT	3350	Left Coast	0892
074, 4450,	Iomega	2558	Marantz	2138, 0892
076, 2506,	Kollins	4339	Oppo	4151
037, 4883	KWorld	4687	Philips	0892
082	LaCie	3345	Pioneer	3624
	Lynksys	1272	Poly Audio	0892
	Matricom	4440, 4899	Sony	3993
	Mede8er	2709	Yamaha	2592
	Media			
076, 1998,	Center PC	1272		
	Mi	3982		
028, 3452	Micca	3669, 3850		
	Microsoft	4000, 2049, 1272	Admiral	4064
	Millet	3982	AEG	2483
	Mind	1272	Aiwa	0121, 1641
054, 4165	Minix	4413, 3884		0189
	MyGica	4339	Akai	2426
	Netgear	3324		

MISC

VIDAC

AMP

TUNER